INSTALLATION INSTRUCTIONS

Item#72434-261

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.2)

Carefully unpack new fixture and lay all the parts on a clear surface.

1. Attach fixture loop (I) by screwing to nipple. (J)
2. Insert front glass (N) into door (M) and secure with clips (O).
3. Insert back glass (P) and side glass (Q) into lamp body (K), and secure with clips (L).

HANGING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker and remove the old fixture from the ceiling, including the mounting hardware.
2. Thread nipple (C) into loop (F) until snug.
3. Thread the other end of nipple (C) with loop attached into crossbar (D) until snug.
4. Place lock washer (B) over the end of the nipple protruding through the crossbar and secure with hex nut (A).
5. Attach the crossbar assembly and mount to junction box with junction box screws (E) **(Size: #8-32N*L0.5")**.
6. Using proper chain pliers to open one end link of the chain provided and connect to the fixture loop (I). Close the link.
7. Lace the fixture wires through the chain.
8. By measuring, determine the correct number of links needed for proper hanging height. Remove and discard remaining chain.
9. Slip loop collar (H) over the chain, followed by canopy (G).
10. Open the other end link of the chain and hang the fixture on the loop at the ceiling. Close the link.
11. Feed the fixture wires through loop (F) and nipple (C).

CONNECTING THE WIRES (Fig.3)

12. At this point, connect the fixture wires as shown in Fig.3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the Crossbar (D) using the green screw provided.
4. Tuck the wire connections neatly into the ceiling outlet box and then raise the canopy (G) to the ceiling and secure with loop collar (H) to chain loop (F)I
5. Install the light bulbs (not included) in accordance with the fixture's specifications: **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig.1) (Fig.2) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

CHAIN HUNG FIXTURE INSTRUCTION

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

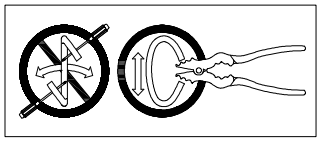

Fig.1

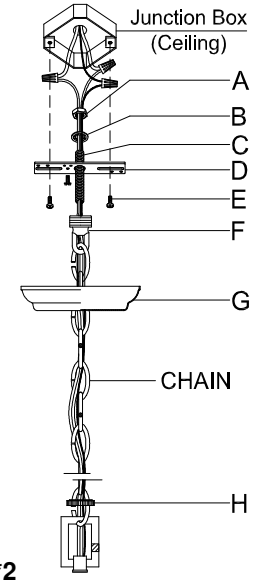

Set# A-016
- Crossbar
- Ground Screw
- Mounting Screw*2

Fig.2

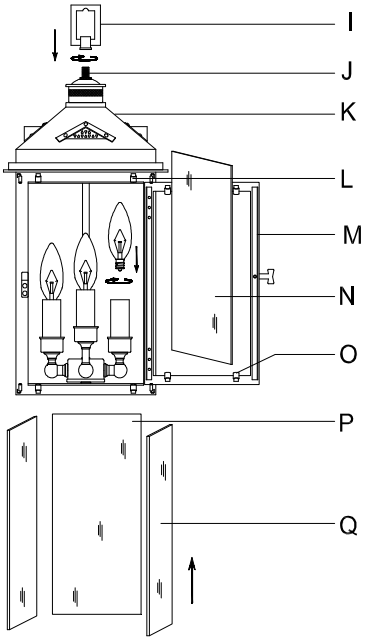

Chain # HCH2072-261

Gauge D3.8mm

Fig.3

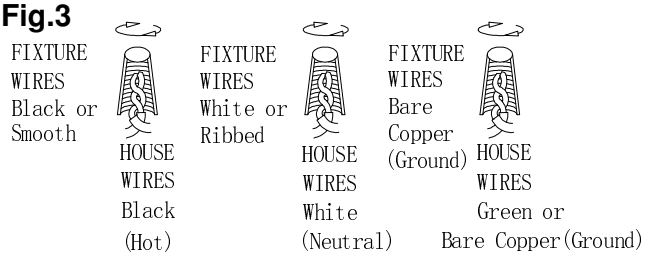
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green or Bare Copper(Ground)

american lighting association

Intertek